


Optigo OP5U


Wall manual / Vägmanual

The Optigo OP5U manual can be downloaded from www.regin.se.
Manualen Optigo OP5U kan laddas ner från www.regin.se.

Change setpoint / Ändra börvärde

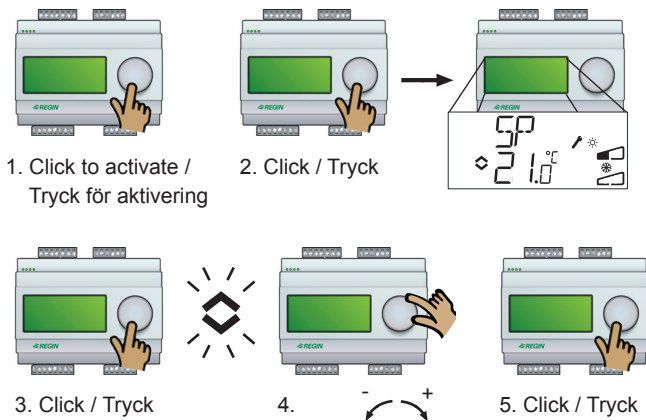


Control modes / Reglerfall

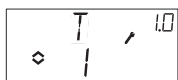


Temperature control /
Temperaturreglering




CO₂-control /
CO₂-reglering

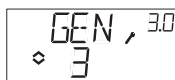

General control /
Generell reglering

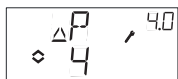


Pressure control /
Tryckreglering

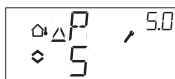

Pressure control with outdoor compensation /
Tryckreglering med utekompensering

Display symbols / Displaysymboler

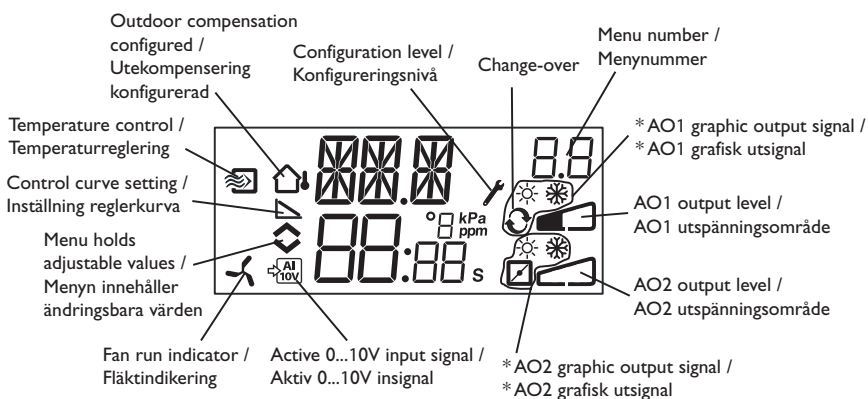

* Control mode 1 only /
* Endast reglerfall 1

Technical support / Teknisk support

